



- 1. Throttle- SLT31059
- 2. Speed Dial- SLT31001
- 2. Speed Control Knob- SLT31057
- 3. Horn Switch- SLT31034
- 4. Light Switch- SLT31073 [1]
- 5. Battery Guage- SLT31056
- 6. Key Switch- SLT31006
- 6. Key - SLTKEY
- 7. Horn Speaker- SLT31060
- 8. Light Assy- PLT31074
- 9. Upper Tiller Cover- PLT31008
- 10. Lower Tiller Cover- PLT31009
- 11. Tiller- SLT31062
- 12. Basket- SLT35003
- 13. Basket Bracket- SLT35051
- 14. Tiller Swivel Assembly- SLT31010
- 15. Tillier Swivel Knob- SLT31010K
- 16. Front Bumper- SLT31028
- 16. Front Bumper Bracket- SLT31022
- 17. Front spring- SLT31071
- 18. Connecting Rod Set- SLT350103
- 19. Steering Fork Assembly- PLT31015
- 20. Tiller Bearing Set- SLT31021
- 21. Front Wheel- PLT31017

- 31. Battery Pack W/21AH Batteries- SLT31051-21AH  
Battery Case Only- SLTPHX31051-20AH  
Battery (2 needed)- LRM412123  
Battery Box Spacers- SLT31068
- 32. Battery Box Contact Plate- SLT31066
- 33. Battery Box Hold Down- SLT31047
- 34. Anti Tip Wheel- SLT31026
- 35. Rear Shroud- SLT31011
- 36. Handle- SLT31070
- 37. Battery Box Shroud- SLT31027
- 38. Foot Shroud- SLT31024
- 39. Front Shroud- SLT31013
- 40. Circuit Breaker- SLT31067
- 41. Seat Post- SLT31018
- 42. Seat Post Bolt- SLT31065
- 43. Disconnect Handle Assy- SLT31019
- 44. Seat 18"- PLT35045  
Seat 20"- PLT35045-20
- 45. Armrest Knob 18" Seat- PLT31052  
Armrest Knob 20" Seat- PLT31052-20
- 46. Left Arm Rest 18" Seat- PLT35040L  
Left Arm Rest 20" Seat- PLT35040L-20  
Right Arm Rest 18" Seat- PLT35040R  
Right Arm Rest 20" Seat- PL T35040R-20